


Assembly Instructions for Bulkheads

- STEP 1.** Bolt any split bulkhead together using $3/8"$ x $4\frac{1}{2}"$ bolts with washers and nuts through predrilled holes.
- STEP 2.** Put bulkhead in place.
- STEP 3.** Have electrician and plumber make the final connections to the electrical panels and water lines.
- STEP 4.** Hook up all washers.
- STEP 5.** Install top panels by placing 4' long sections first, then using shorter pieces provided to fill.
- STEP 6.** Install end panels and/or access panels using $1\frac{1}{2}"$ self-tapping pan head screws in predrilled holes. Make sure to leave $3/4"$ reveal at the top and equal reveal on each side (unless ordered to fit differently).

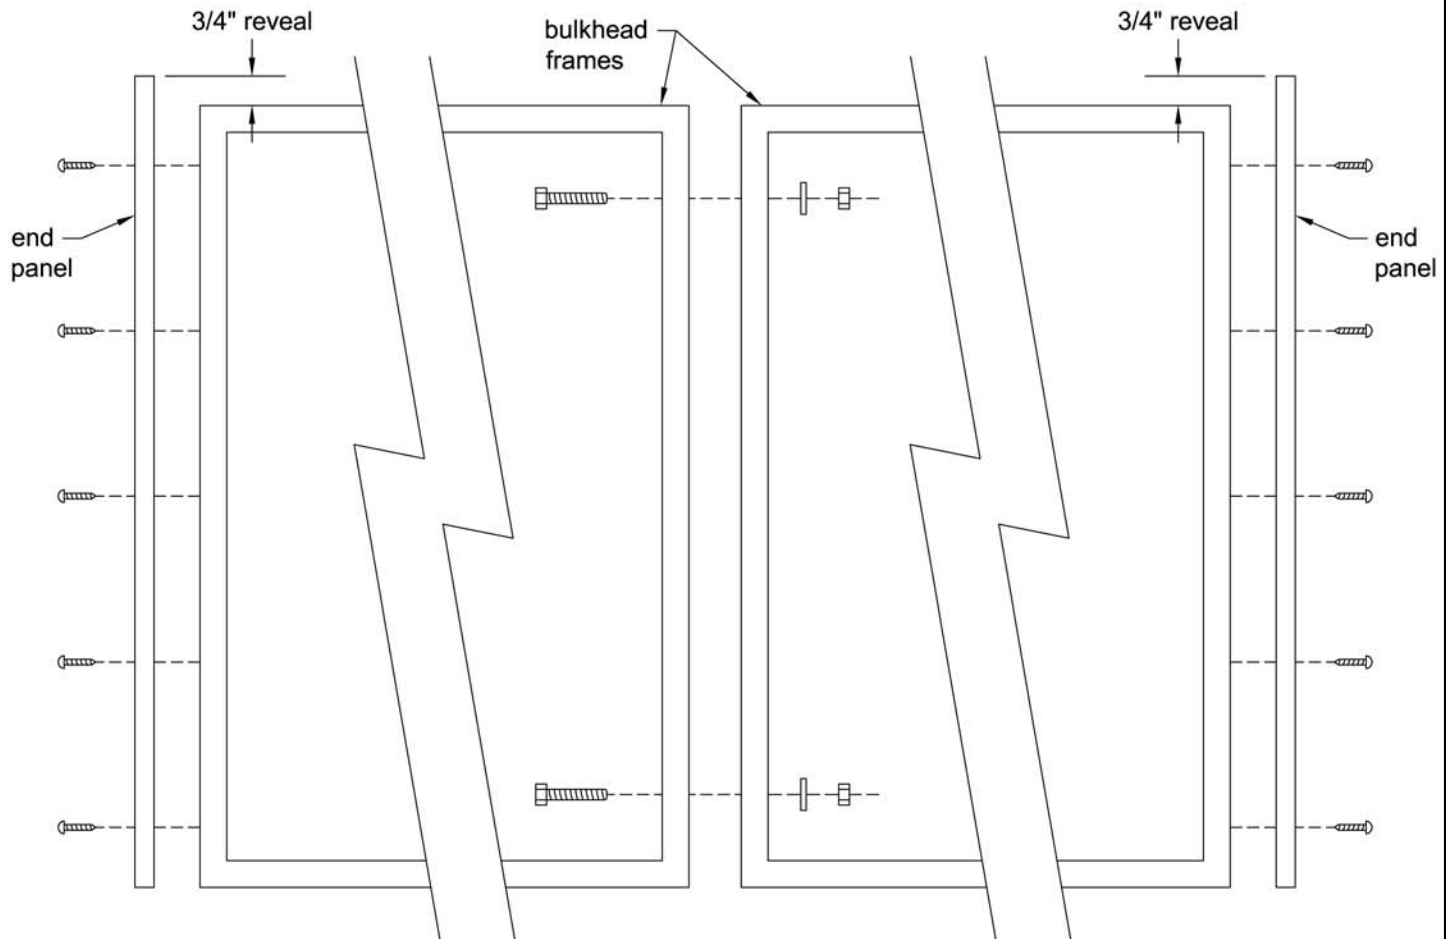

NOTES:

All top panels and end panels are $3/4"$ thick.

All side panels are $1/4"$ thick and usually come preinstalled.

All top panels are 4' long except fill pieces.

Screws for end panels are $1\frac{1}{2}"$ self-tapping phillips pan head screws.

Screws for side panels (if needed) are $3/4"$ self-tapping phillips pan head screws.



UL documentation is on hand at the factory available upon request.