


# Assembly Instructions for Bulkheads

- STEP 1.** Bolt any split bulkhead together using 3/8" x 4 1/2" bolts with washers and nuts through predrilled holes.
- STEP 2.** Put bulkhead in place. If it is against a wall, leave 3/4" space between the frame and the wall.
- STEP 3.** Have electrician and plumber make the final connections to the electrical panels and water lines.
- STEP 4.** Hook up all washers.
- STEP 5.** Install end panels and/or access panels using 1 1/2" self-tapping truss-head screws in predrilled holes. Make sure to leave 3/4" reveal at the top and equal reveal on each side (unless ordered to fit differently).
- STEP 6.** Place top panels on bulkheads. 4' long sections will fill most of the bulkhead, shorter sections will go at each end. Using 1 1/2" self-tapping truss-head screws in predrilled holes, attach the tops to the frame.

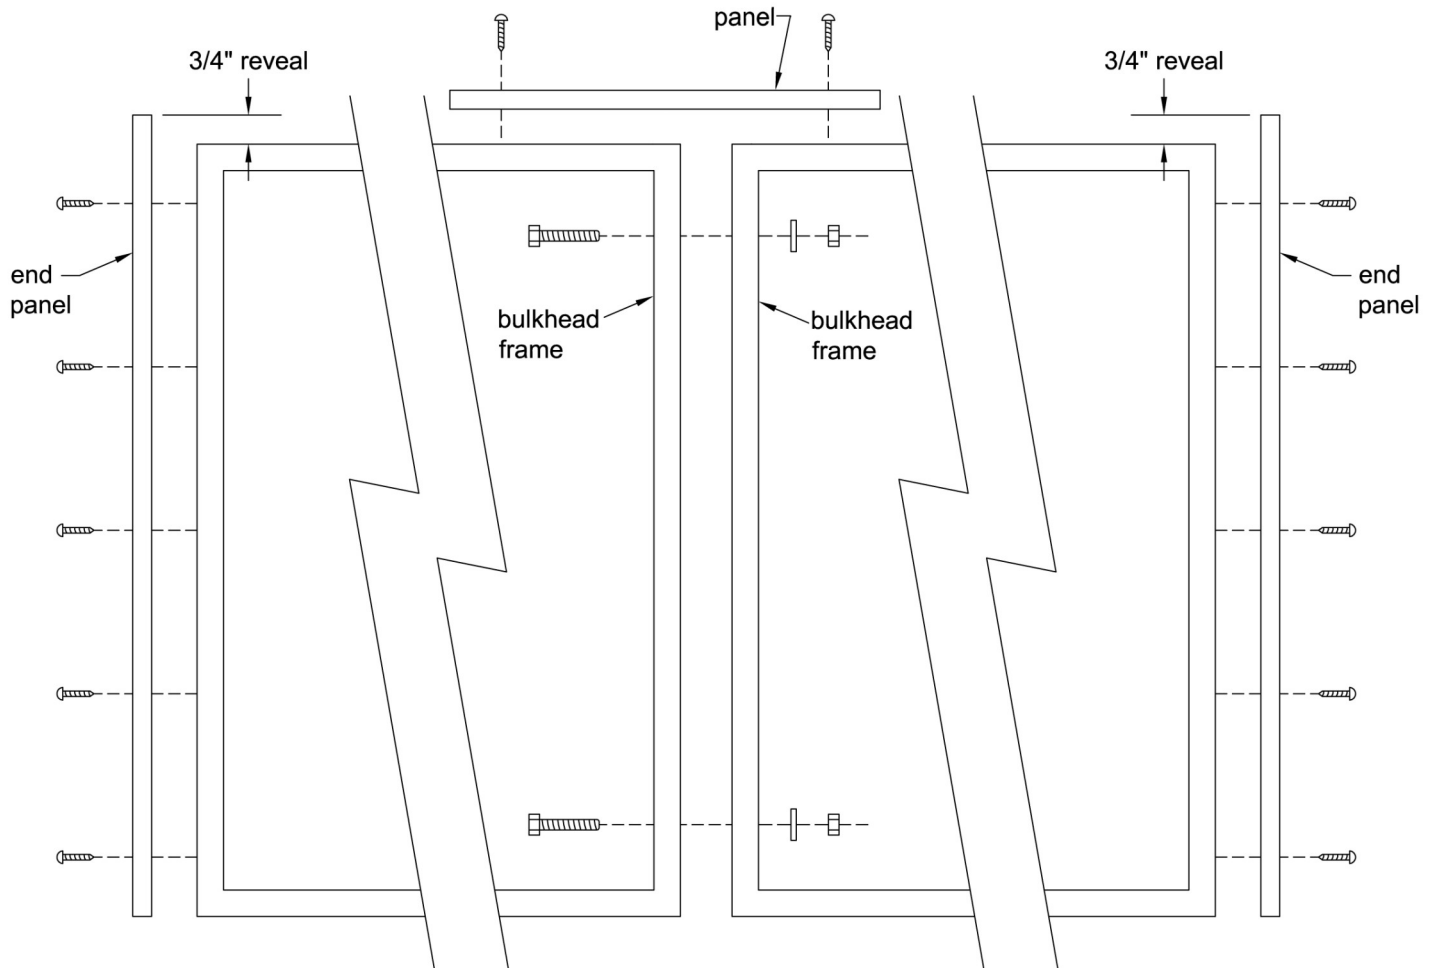

## NOTES:

All top panels and end panels are 3/4" thick.

Partial fill comes preinstalled.

All top panels are 4' long except fill pieces at the ends.

Screws for end panels and top panels are 1 1/2" self-tapping phillips truss-head screws.

Screws for side panels (if needed) are 3/4" self-tapping phillips truss-head screws.



UL documentation is on hand at the factory and available upon request.

